


**CONSTRUCTION**

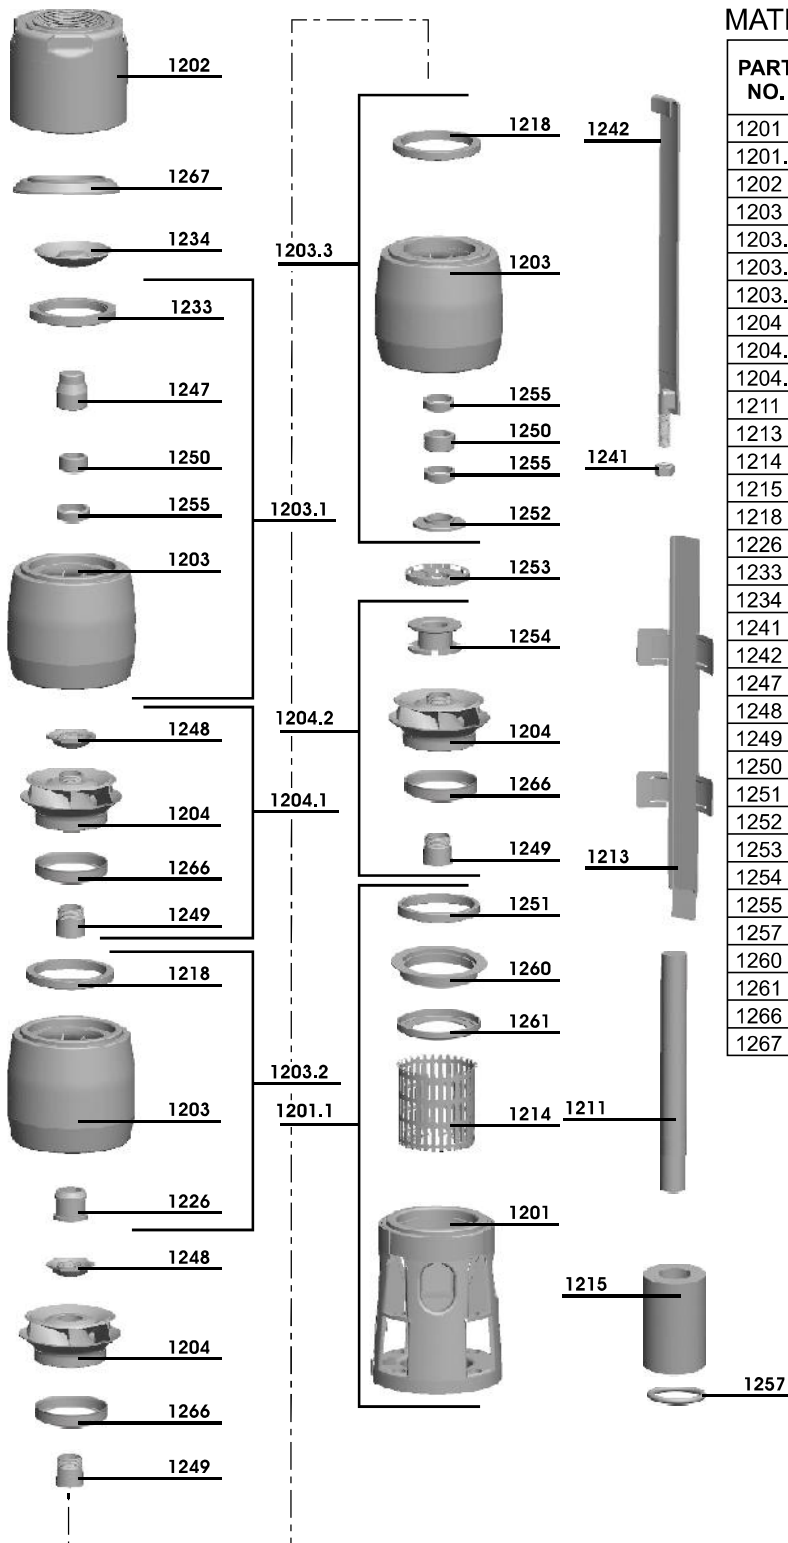

**MATERIALS**

PART NO.	PARTS NAME	MATERIAL
1201	SUCTION CASE	SS 304
1201.1	SUCTION CASE (COMPLETE)	-
1202	DELIVERY CASING	SS 304
1203	BOWL / DIFFUSER	SS 304
1203.1	TOP BOWL / DIFFUSER (COMPLETE)	-
1203.2	STAGE BOWL / DIFFUSER (COMPLETE)	-
1203.3	BOTTOM BOWL / DIFFUSER (COMPLETE)	-
1204	IMPELLER	SS 304
1204.1	STAGE IMPELLER (COMPLETE)	-
1204.2	BOTTOM IMPELLER (COMPLETE)	-
1211	PUMP SHAFT	SS 431
1213	CABLE GUARD	SS 304
1214	STRAINER	SS 304
1215	COUPLE	SS 316
1218	NECK RING	NBR
1226	BEARING	NBR
1233	VALVE SEAT	NBR
1234	NRV BASE	SS 304
1241	NUT	SS 316
1242	CLAMP STUD	SS 304
1247	TOP BEARING CAP	SS 304
1248	COLLET NUT	SS 304
1249	COLLET	SS 304
1250	TOP BEARING	NBR
1251	BOTTOM NECK RING	NBR
1252	NUT STOP RING	SS 304
1253	SPACING WASHER	PTFE
1254	NUT THD. RING ASSEMBLY (ONLY FOR P06-230,P06-300)	SS 304
1255	BEARING CUP	SS 304
1257	'O' RING FOR COUPLE	NBR
1260	BOTTOM NECK RING COVER (ONLY FOR P06-150)	P.P
1261	STRAINER SUPPORT (ONLY FOR P06-150)	SS 304
1266	WEAR RING	SS 304
1267	NRV VALVE GUIDE RING	SS 304